

Manual for watchphone




BURG 7




YOUNG AND TRENDY
(Silver/Black, Silver/White)

WWW.RUKOFON.RU

Content

1. Safety and Maintenance.....	5
1.1 Introduction	5
1.2 .Safety Warnings and Precautions	5
1.3 Notes on using the watch phone	5
1.4 Notes on using the battery	6
1.5 Notes on using the charger (optional)	6
1.6 Cleaning and maintenance	7
2 Instructions before use.....	8
2.1 Specification.....	8
2.2 Mobile appearance	8
2.3 Key Description	9
2.4 Watch face	9
2.5 Charge the batter.....	10
2.6 SIM Card.....	11
2.6.1 SIM Card Usage.....	11
2.6.2 SIM card insertion and removal	11
2.7 Switch on / off.....	12
2.7.1 Switch on/off	12
2.7.2 Unlock SIM Card and Watch Phone.....	12
2.8 Phone calls	12
2.8.1 Make a call.....	12
2.8.2 Answer call	12
2.8.3 Stop a call	12
2.8.4 Refuse a call	13
2.8.5 Options during calling.....	13
2.8.6 View contacts	13
2.8.7 Display received calls.....	13
2.8.8 Emergency call.....	13
2.9 Basic settings	13

2.9.1 Time settings	13
2.9.2 Language settings	13
2.9.3 Profile setup	14
2.9.4 Back light setup	14
2.10 Text input.....	15
2.10.1 Change input method.....	15
2.10.3 Text input.....	15
2.10.4 Number input	16
3 Menu	17
3.1  Contacts.....	18
3.1.1 Search entry.....	18
3.1.2 Add new entry	18
3.1.3 Copy all	19
3.1.4 Delete	19
3.1.5 Caller group	19
3.1.6 Extra number	19
3.1.7 Settings	19
3.1.8 Caller picture	19
3.1.9 Caller ringtone	20
3.2  Message.....	21
3.2.1 SMS.....	21
3.2.2 MMS	22
3.2.3 Voice mail server	23
3.2.4 Broadcast Message.....	23
3.3  Recent calls.....	24
3.3.1 Missed calls.....	24
3.3.2 Dialed calls.....	24
3.3.3 Received calls.....	24
3.3.4 Delete recent calls	24
3.3.5 Call time.....	24

3.4		Settings.....	26
3.4.1		Pen calibration.....	26
3.4.2		User profiles	26
3.4.3		Phone setup.....	26
3.4.4		Call Setup	27
3.4.5		Network Setup	29
3.4.6		Security setup	29
3.4.7		Restore factory settings.....	30
3.5		Multimedia & Organizer	31
3.5.1		Organizer	31
3.5.2		File manager	32
3.5.3		Camera	32
3.5.4		Image viewer	32
3.5.5		Audio player.....	32
3.5.6		FM Radio.....	32
3.6		Bluetooth.....	33
3.6.1		Network services	33
3.6.2		Bluetooth.....	33
3.6.3		Data account.....	33
		Frequent asked questions	34

1. Safety and Maintenance

1.1 Introduction

Thank you for buying your Burg 7 watch phone. To get familiar with your watch phone please read the manual carefully. In addition to basic call functions.

1.2 .Safety Warnings and Precautions

Please read these notes carefully before using the watch phone to ensure the safe and correct use.

1.3 Notes on using the watch phone

- Your watch phone can only use the battery and charger provided by Burg. The use of other products may cause battery leakage, overheating, bursting and fire.
- Please switch off the watch phone in the places where cell phones are prohibited such as:
 - During a flight
 - In hospitals

Because the watch phone may affect electronic equipment and medical devices. Please follow the relevant provisions while using watch phone in these areas.

- Do not use your watch phone while driving. Please stop the car before making or answering phone calls.
- Do not use your watch phone at gas stations (repair station) or near flammable substances, or chemical agents; it might cause a fire.
- Do not use the watch phone near weak signal or high-precision electronic devices. Radio wave interference may cause miss-operation of electronic equipment and other issues. Especially in the vicinity of the following equipment: hearing aids, pacemakers and other medical electronic equipment, fire detectors, automatic doors, and other automation devices. Consult Burg or a local vendor for the affect that watch phones can cause on pacemakers and other medical electronic equipment.
- Do not press hard on the liquid crystal display or use it to hit other things, otherwise it will result in broken LCD panels and liquid crystal fluid leakage. If the liquid crystal fluid goes into the eye it can cause blindness. In this case, please immediately flush eyes with water (do not rub the eye) and seek medical treatment immediately.
- Do not demolish or modify the watch phone, otherwise it will cause damage to cell phones, electricity leakage and electrical fault.
- Keep the watch phone away from magnetic card and other magnetic objects; watch phone radiation wave may remove information stored in floppy disk, savings cards or credit card.
- Contact with water or other liquids may cause overheating, leakage and failure of the phone.
- Do not put batteries, the watch phone, charger in the microwave oven or high pressure equipment. It may cause circuit damage, fire or other accidents.
- Do not use the watch phone near flammable and explosive gases. The use of the watch phone in this situation may lead to failure and cause a fire.

- Do not put the watch phone in a place with high temperature, high humidity or a large number of dusts. It may cause malfunction.
- Place the watch phone in a place where the children cannot access easily to prevent them from injury.
- Do not place the phone on uneven or unstable table to prevent failure or damage of the phone.
- Working condition: temperature 5°C~40°C; humidity: 35%~85%.
- If possible, don't use the watch phone near an ordinary telephone, television, radio and office automation equipment so that it will not affect the function of these devices or the watch phone itself.

1.4 Notes on using the battery

- Do not throw the battery into fire, otherwise it will cause the battery to catch fire or burst.
- Do not use wires, needles or other metal objects to short-circuit the battery; this can lead to battery leakage, overheating, bursting or fire.
- Do not weld the battery terminals; otherwise it will lead to leakage, overheating, bursting or fire.
- If the battery fluid may cause blindness if in contact with eyes. In case this accident happens, please do not rub the eyes, use clean water rinse, and seek medical treatment immediately.
- Do not disassemble or modify the battery, it may lead to battery leakage, overheating, bursting and fire.
- Don't use or place battery near to fire or a high temperature device such as heater, it may lead to battery leakage, overheating, bursting and fire.
- If the battery warms up, the color or shape of the battery changes or other anomalies happen during usage, please stop use and return the watch phone to your Burg selling point.
- If the battery liquid ran into the skin, clothing, which may cause skin burns, immediately rinse with water, if necessary, please seek medical treatment immediately.
- Do not damp the battery; it may lead to battery overheating, smoke and corrosion.
- Do not place the battery direct under the sunlight or near the hot areas in a car, it may lead to fluid leakage and overheating, and may reduce performance and shorten service life.
- Do not throw old batteries in the general garbage. Follow the instructions of a battery disposal place.
- Do not charge more than 24 hours at one time.

1.5 Notes on using the charger (optional)

- Short-circuit of battery charger will cause electric shock, smoke and damage to the charger.
- Please do not use the charger when its cable is damaged, otherwise it will lead to fire and electric shock.
- Please clean accumulated dust on a power outlet.
- Please do not place any water container etc. next to the charger to prevent overheating, leakage and failure caused by water spills,
- If the charger comes in contact with water or other liquids, immediately pull off the charger from the power outlet to prevent overheating, fire, electric shock and charger failure.
- Please do not demolish or convert charger, otherwise it will lead to personal injury, electric shock, fire and charger damage.

- Please do not touch the charger, cables or power outlet when hands are wet, otherwise it will cause an electric shock.
- Do not place heavy objects on the charger cable or modify it; otherwise it will create electric shock and fire.
- Please pull out the power plug when cleaning or maintaining the power plug.
- Do not pull the cable of the wire; it may cause an electric shock or fire.
- Do not charge the mobile in the following circumstance: under direct sunlight; temperature

Below 5 °C or above 40 °C; humid, dusty or with too much vibration (will cause failure); vicinity of TV sets, radios and other electrical appliances (will affect the image, sound effects).

1.6 Cleaning and maintenance

- Watch phone, batteries and charger are not waterproof, do not use in the bathroom or places with high humidity, avoid damp by rain for the same reason.
- Do not wipe the watch phone with alcohol, thinner or benzene solution.
- Plug with dirt will cause mal-contact and loose plug which affect the charging effect. Clean regularly.

 
2 Instructions before use

2.1 Specification

Network :	GSM900MHz/DCS1800MHz
Screen :	LCD
Operating voltage :	3.7V-4.2V
Battery Capacity :	430mAh (Prevail in-kind)
Standby time :	48hours
Talk time :	1 hour -2 hours (depending on network)

* Standby time and talk time can vary due to SIM card / network settings and usage

2.2 Mobile appearance

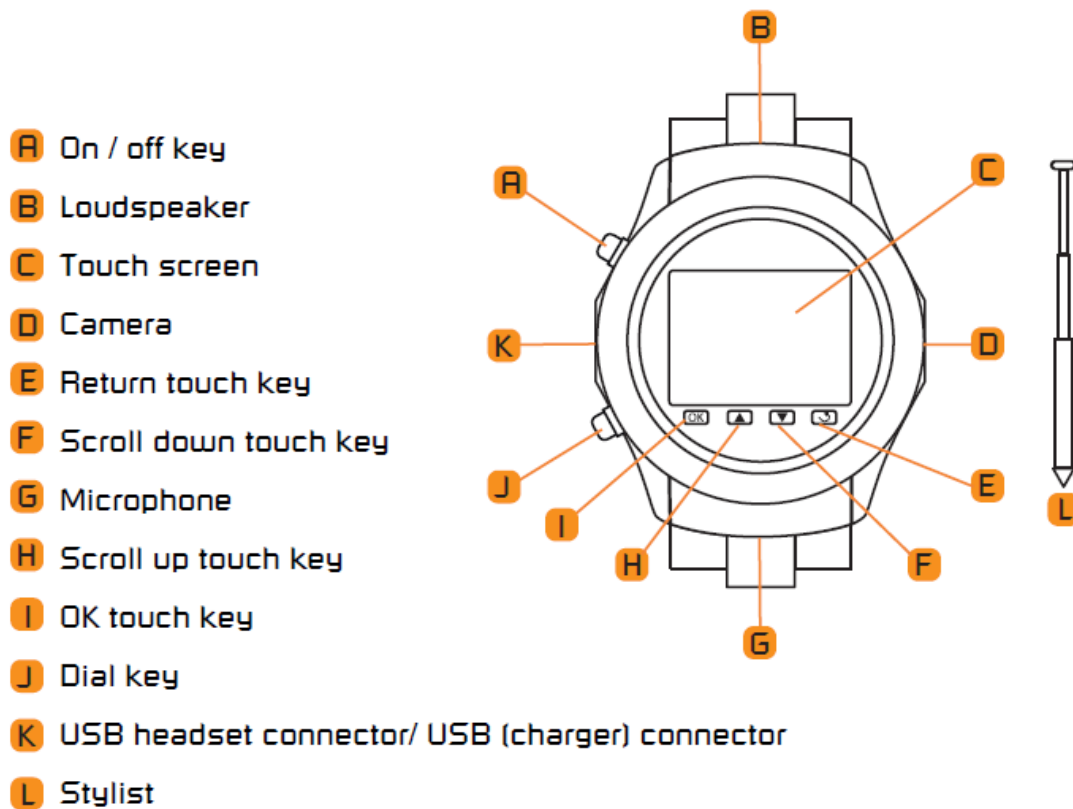


2.3 Key Description

On / Off key	<ul style="list-style-type: none"> • Press and hold to switch on/off. • In menu mode, press to go back to standby mode. • End a call or reject phone calls.
Dial key	<ul style="list-style-type: none"> • In standby mode: Press to go to recent calls • Make / receive phone calls • In standby mode, press this key to enter the main menu • In the menu interface, this key performs as "select" or to confirm the operation.
Return touch key	<ul style="list-style-type: none"> • In menu mode, press to access a top menu.
Scroll down touch key	<ul style="list-style-type: none"> • Scroll one line down
Scroll up touch key	<ul style="list-style-type: none"> • Scroll on line up
OK touch key	<ul style="list-style-type: none"> • In the menu interface, this key performs as "select" or to confirm the operation.


2.4 Watch face

The watch face shows the different functions of your Watchphone. This includes three parts:

 The top area shows one or more of the following status icons:

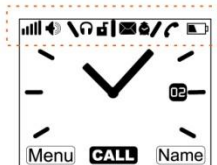

 The middle area indicates messages, indication and other input content, including numbers, words and dynamic icons.

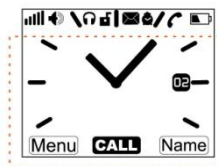

The Bottom area has two divisions: two icons and four function icons.



 
2.5 Charge the battery

The initial state of the battery is charged about 25%. Please empty the battery fully and charge to full battery for the first 3 times to achieve the best use of the battery.

- Connect the USB to your computer or adapter.
- Insert charger connector USB charger jack
- At this time, battery indicator on the right top of the screen will be flashing and circulation; if the Watch phone is turned off during charging, the charging indicator will appear on the screen to indicate the charging process. If the watch phone is switched off it may take some time until the battery indicator appears on the screen.
- Charge has been completed when the battery indicator on the top right corner shows full battery and stopped flashing. The screen also shows image of "Charge Completed". This process usually takes 2 ~ 3 hours. During charging batteries, it is normal that cell phone and charger become warm.

Note:

- *Battery should be immediately put to charge when the phone automatically shuts down or shows "battery low" warning.*
- *The standby and talk time is base on an ideal environment. In practical situations, the standby and talk time can vary due to the network, work environment and usage.*
- *Disconnect the charger after battery is fully charged.*
- *If the charger is not disconnected after charging, after some time the battery will lose the electricity and start getting charged again. This process will reduce the battery life.*

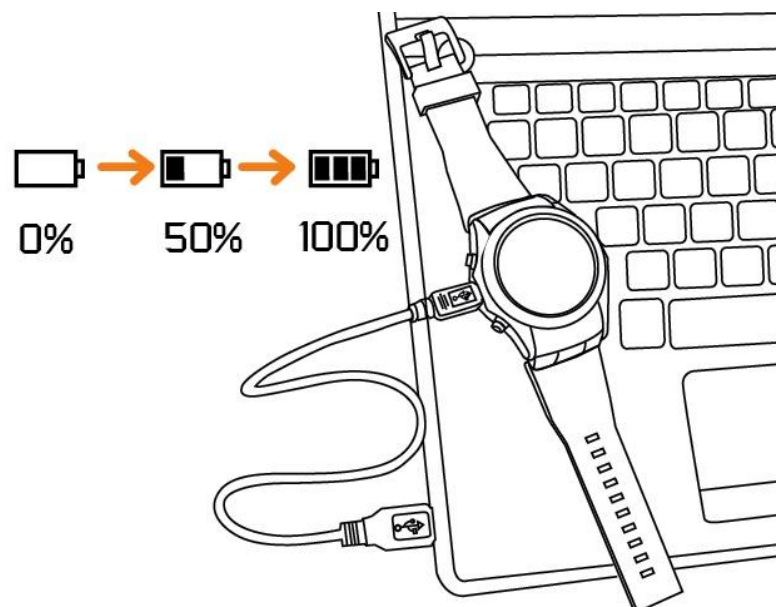

2.6 SIM Card

Warning! Always make sure the watch phone is switched off before removing the battery.

2.6.1 SIM Card Usage

A valid SIM card GSM must be inserted in the phone before using the phone. Any GSM SIM card can be used in your watch phone. Please note the watch phone is not operating on 3G SIM cards. In order to prevent loss and damage of information saved on your SIM card, touching the metal plane area should be avoided, and keep the SIM card away from electric and magnetic area.

2.6.2 SIM card insertion and removal

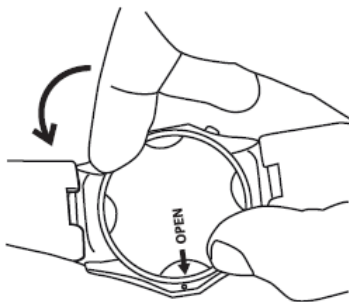 


Figure 1 Open the back cover by moving to the left

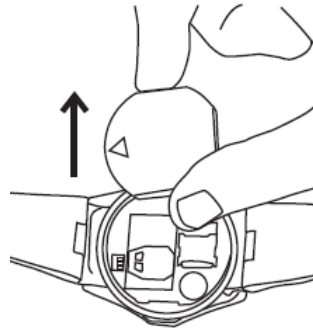 


Figure 2 Remove the battery

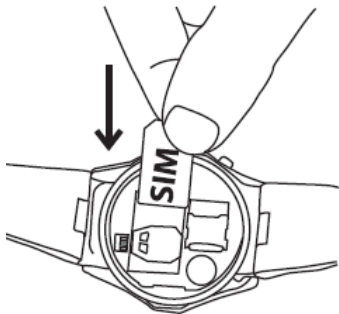 


Figure 3 Insert the SIM card as shown

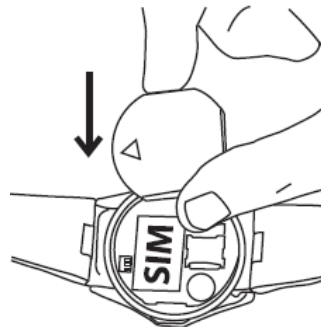 


Figure 4 Put back the battery


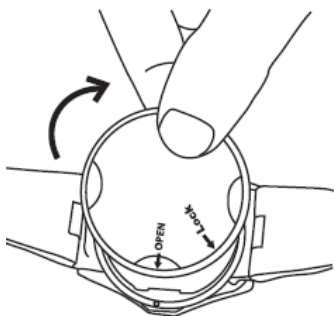 


Figure 5 Close the cover

2.7 Switch on / off

2.7.1 Switch on/off

 Press and hold the on / off key to switch on the watch phone; press and hold the on / off key again to switch off the watch phone.

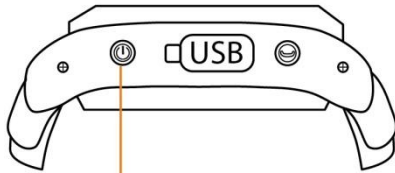

Long press the On / Off key

2.7.2 Unlock SIM Card and Watch Phone

1. To prevent misuse of the watch phone, a password can be set.
In standby mode → settings → security Setup (6) → SIM lock (1)
2. Input PIN, if your SIM card is secured with a pin code, please insert it and confirm it with the OK key. Please note that after 3 times continuous wrong input, your SIM card will be locked. The watch phone will request the PUK code of your SIM card, if you do not know the PUK code of your SIM card, please contact your telecom provider for the PUK code, to unlock the SIM card.

2.8 Phone calls

Once the valid network is available, you can make and receive phone calls. Information on the upper left corner of screen display shows network signal strength (signal is the strongest when 5 bars appear).

2.8.1 Make a call

- In standby modus touch (call) icon with telescopic pen
- Dial the number which should be called by using the simulated keypad
- Press the OK key. The following two options will appear:
 1. Dial
 2. Save to Phonebook
- To make a call press **dial (1)** to make the call

2.8.2 Answer call

- Press “confirmation key” to answer.

2.8.3 Stop a call

- Press “On-off key” to stop a call.

2.8.4 Refuse a call

- Press “On-off key” to refuse a call.

2.8.5 Options during calling

During a phone call you can access a number of options by tapping **option** on the watch face. The following features are available:

1. **Hold** Place the call on a hold (Network support required)
2. **End** End the phone call
3. **Volume** Adjust the call volume
4. **New Call** Dial a new number (Network support required)
5. **Contacts** Access the contact menu
6. **SMS** Access the SMS menu to write a message
7. **Mute** Activate or deactivate microphone
8. **DTMF** Enable Dual Tone Multi Frequency

During a call you can also set:

H-Free to activate hands free calling

H-Held to activate hand held calling

2.8.6 View contacts

In standby mode press name. Find the number you want by using the scroll bar right on the screen.

2.8.7 Display received calls

In standby mode tap menu → Recent calls → Received calls

2.8.8 Emergency call

When your watch phone is covered by the network (refer to the signal indication on the screen), you can make an emergency call, by selecting the emergency number.

2.9 Basic settings

2.9.1 Time settings

In standby mode, press menu → settings → Phone Setup → Time and Date (1)

The following setting can be changed:

1. Set home city
2. Set Time/Date
3. Set Format

2.9.2 Language settings

In standby mode, press menu → settings → Phone Setup → Language (2) *

* It depends on your model watch phone witch language are supported.

2.9.3 Profile setup

The user profile allows you to change several settings on your Watch Phone by choosing one profile.

In standby mode press menu → settings → User profiles (2).

Here you will find the following profiles

General (1)

Meeting (2)

Outdoor (3)

Indoor (4)

Headset (5)

Bluetooth (6)

Activate a profile:

From the user profile menu tap the desired profile and tap activate (1).

Customize a profile

You can customize a number of options. To customize a profile: From the user profile menu tap the desired profile and tap customize (2)

Here you can adjust the following settings:

Tone setup (1) Adjust the tone for; Incoming call (1), power on (2), Power off (3), incoming message (4) and keypad (5).

Volume (2) Adjust the volume of tone's and key pad

Alert type (3) Adjust the ringtone of an incoming call to; Ring on, Vibration only or vibration and ring at the same time.

Ring type (4) Adjust Single ring, Repeating tone or ascending tone

Extra Tone (5) Adjust tone's for errors warnings etc

Answer mode (6) Enable or disable any key answering

2.9.4 Back light setup

In standby mode, press menu → settings → Phone Setup → LCD Setting

Brightness

Set up the brightness of the screen. To decrease Brightness tap the bar to the left to increase Brightness tap the bar to the right.

Time:

Set up display backlight time. If a key is not pressed within a certain period of time, the background light will automatically shut down. You can choose to light up your back light 5 to 60 seconds. To decrease time tap the bar to the left to increase time tap the bar to the right.

2.10 Text input

This mobile support hand write, spell, number, English, capital English input, and could be used in:

- Editing phonebook
- Writing a message
- Adding a memo
- file management
- Greetings and other file editing.

2.10.1 Change input method

After enter editing windows (include editing phonebook, message, and memo), you can change the input method. It depends on the model witch input methods are available. You can change the input method by tapping opting → Input method. At least the following settings are available.

 
Number: "123"

English capital: "ABC"

English: "abs"

2.10.3 Text input

Use the stylist and press ↑ icon, the simulate keypad will show on the screen. According to what is needed enter the character by tapping on it. The display will show the following:

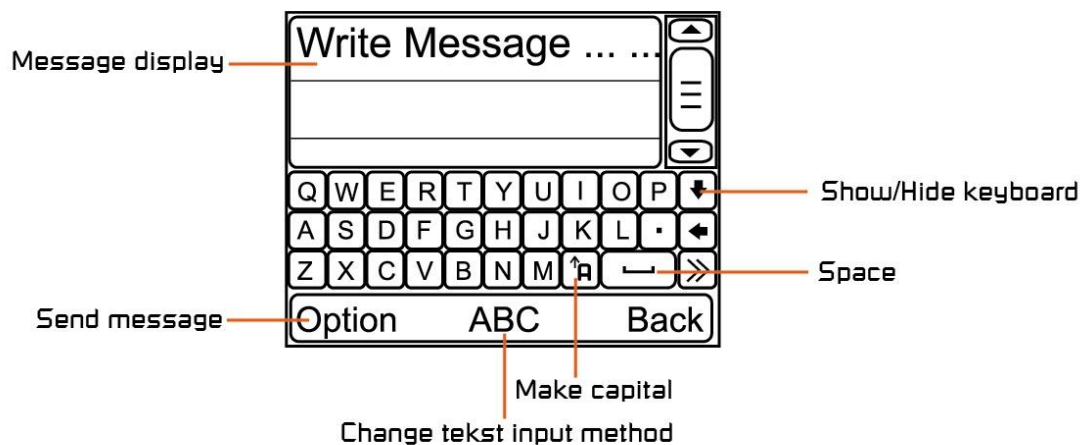

Depending on the writing mode you can also access:

1. Use template Use predefined template
2. Insert object Insert picture's or songs
3. Format text Change size, style and Alignment of text

4. Insert phone book number
5. Insert phone book name
6. Insert bookmark
7. Input method Change the input method

2.10.4 Number input

Choose "123" and press the icon ↑, then show the simulate keypad and number sign, press number and input at Insert.

3 Menu

In the standby mode tap menu to enter the menu interface. Tap on the screen will enter the relevant icon menu.



3.1 Contacts

The storage capacity of telephone numbers depends on SIM cards. The telephone numbers of cell phones and SIM memory can be used as a unified telephone directory inquiry.

The mobile watch can store up to 500 phone number, SIM card store depends on the number of telephone numbers and storage capacity. The telephone numbers of cell phones and SIM memory can be used as unified telephone directory inquiries. Each name can be stored in the corresponding three mobile telephone number. For each record, according to the "choice", can perform the following operations:

To enter the contact menu; In standby mode tab menu → contacts

3.1.1 Search entry

To enter the search entry menu; In standby mode tab menu → contacts → Search entry

This feature allows you to search by alphabet order. For example, you want to search for telephone number of someone with surname "Robbert": The first letter of Robbert is "R", the corresponding key on keyboard is R. Tap R and twice OK key. If there are relevant records, then contact with surname "Robbert" will be displayed. The watch phone shows always the first contact with the letter "R". You can scroll with the scroll bar on the right of the watch face. Press option to access the menu, here the following options can be chosen:

- Send SMS :** Send a SMS to the selected contact.
- Send MMS:** Send a MMS to the selected contact
- View:** View contact details
- Edit:** Edit the contact
- Delete** Delete the contact
- Copy:** Copies of the records will be replicated from mobile phone to SIM card, or SIM cart to the cell phone
- Move:** Moves the record if the record stored on the cell phone to the SIM card, or if the record is stored on the phone to the SIM card.
- Duplicate:** Duplicate the contact to the SIM and the Phone
- Send v Card:** Send a Vcard to the selected contact

3.1.2 Add new entry

To enter the Add new entry menu; In standby mode tab menu → contacts → Add new entry

This feature allows you to add new contacts to the phone book. You can add to SIM card or to the watch phone memory, specific operations are as follows:

1. Select "Add new entry (2)" in contact book;
2. Tap "Save to SIM" or "Save to Phone"
3. Tap name followed by edit and fill in the name. To confirm press OK key twice.

4. Tap number and key in the number on the numeric key pad.
5. Confirm by tapping OK key
6. When to Watch Phone ask you to save press Yes.

3.1.3 Copy all

To enter the Copy all menu; In standby mode tab menu → contacts → Copy all

This feature allows you to copy and paste the content in the contact book between the SIM card contact book and the watch phone contact book.

3.1.4 Delete

To enter the Delete menu; In standby mode tab menu → contacts → Delete

This feature allows you to delete the content in watch phone contact book or SIM card contact all in once.

3.1.5 Caller group

To enter the Copy all menu; In standby mode tab menu → contacts → Copy all

This function could set five group names, incoming call ringbone, incoming call pictures, and incoming call movie and group numbers.

3.1.6 Extra number

To enter the Extra number menu; In standby mode tab menu → contacts → Extra number

With this function you can set up the following numbers;

- Owner number
- Service Dial Number
- SOS number

3.1.7 Settings

To enter the Settings menu; In standby mode tab menu → contacts → Settings

Memory status: Indicate the used and remaining storage of the contact book in watch phone and SIM card.

Preferred storage: Setting store position of new numbers, choose acquiescence status to SIM or phone.

Fields: Set up witch fields should be showed when setting up a new contact

Name list filter: Set up when search for entry; Watch phone book only, SIM card only or both.

My V card: Edit your name card and send your V card.

3.1.8 Caller picture

To enter the Caller picture menu; In standby mode tab menu → contacts → Settings

Will appear on the watch screen

3.1.9 Caller ringtone

To enter the Caller ringtone menu; In standby mode tab menu → contacts → Caller ringtone


You can set a special ringtone for someone call, so that you can know who is calling.

3.2 Message

To enter the Message menu; In standby mode tab menu → Messages

3.2.1 SMS

To enter the SMS menu; In standby mode tab menu → messages → SMS

When you receive a new message, this icon  will appear on the watch face, if the inbox has full you can't receive a new message. When this happens please delete some unnecessary messages from your inbox.

Inbox

This menu allows you to read SMS messages, tap on the SMS to read it. In this menu you can tap option to take the following actions:

- | | |
|------------------|---|
| 1. Reply | Answer SMS |
| 2. Delete | Delete SMS |
| 3. Edit | Edit the SMS |
| 4. Forward | Forward the SMS |
| 5. Copy to phone | Copy the SMS to the phone memory |
| 6. Move to phone | Copy the SMS to the SIM memory |
| 7. Delete all | Delete All messages |
| 8. Copy all | Copy all messages from SIM or Phone |
| 9. Move all | Move all numbers from SIM or from Phone |
| 10. Use Number | Use number to Dial, Save to phone or send SMS |
| 11. Use Url | Use URL if supported in SMS |

Out box

Allows you to see messages that are not yet send out

Write message

To write a message follow the following steps:

1. Enter the messages menu.
2. Tap SMS → write message
3. Tap ↑ to show the full key pad
4. Write the message by tapping the different letters
5. Tap option → done
6. Choose Send only (1) or Save and Send (2)
7. Tap Ok
8. Insert phone number (use search to search for a contact in the phone book)
9. Tap OK

Your message is now send

Template

Allow you to send some predefined messages to send.

Message setup

Allow you to set up some settings such as; Profile setting, Common setting and Memory status.

3.2.2 MMS

To enter the MMS menu; In standby mode tab menu → messages → MMS

Your phone could send and receive MMS (Multimedia Messaging Service). Through MMS, you can send pictures, sound and text messages. When sending MMS information, the recipient must use be able to receive MMS messages.

Write message

1. From the messages menu tap MMS
2. Tap Write Message
3. A number of fields will appear. Each has a different function.
 - a. To Sending to number or email address
 - b. CC (copy) Send a copy to number or email address
 - c. Bcc (blind copy) Send a blind copy to number or email address
 - d. Subject Set the MMS subject
 - e. Edit content Add MMS content. User can add word, pictures, voice and affix
4. To fill in a field tap on the field followed by Edit
5. Field a, b and c you can fill in number or email address. Field D you can enter the subject of you message by key in text.
6. Tap on Edit content → edit
7. Here you can adjust the MMS as you preferred.

Inbox

This menu allows you to read MMS messages, tap on the MMS to read it.

Outbox

Allows you to see messages that are not yet send out

Draft

You saved MMS messages will be stored here. Following options will appear.

View: Check the content of MMS
Send: Send MMS
Edit: Edit MMS

Delete all: Delete all MMS in draft box
Properties: See the sender, topic, date and volume.
Use details: Use the number in MMS.

Template

You can choose from predefined templates

3.2.3 Voice mail server

To enter the VOICE MAIL SERVER menu; In standby mode tab menu → messages→ VOICE MAIL SERVER

Setting voice box No. and messaging, when you get voice mail, the service supplier will send notice to your mobile, and you can input two group of voice box no.. In message menu, press confirmation key to choose “voice mailbox” and press “OK” to enter. Edit: input or amend number Connect to voice: you can listen to voice message with this function.

3.2.4 Broadcast Message

To enter the broadcast message menu; In standby mode tab menu → messages→ broadcast message

The service allows you to receive the text of a variety of information, such as weather conditions or traffic information. The opening of the world’s few network, and relevant information requested advisory network operators.

3.3 Recent calls

To enter the missed calls menu; In standby mode tab menu → recent calls

3.3.1 Missed calls

To enter the missed calls menu; In standby mode tab menu → recent calls → missed calls

You can see the 20 recently missed calls. Access to this function and press OK key to choose a telephone number.

Press "Option" on the recording interface, then you can operate as follows:

Delete:	Delete the records from the missed calls list.
Save to phone book:	Save numbers to SIM card or mobile phone.
Dial:	Dial number.
Edit:	Edit phone no. and store to SIM or mobile.
Send SMS:	Edit and send SMS.
Send MMS:	Edit MMS and send.

3.3.2 Dialed calls

To enter the dialed calls menu; In standby mode tab menu → recent calls → dialed calls

With this function, you could visit the last 20 dialed calls, after choosing a dialed call, you can operate send messages and MMS, delete, save, dial and edit. Please refer to "Missed calls".

3.3.3 Received calls

To enter the received calls menu; In standby mode tab menu → recent calls → received calls

With this function, you could visit last 20 received calls, after choosing a received call, you can operate send messages and MMS, delete, save, dial and edit. Please refer to "Missed calls".

3.3.4 Delete recent calls

To enter the delete recent calls menu; In standby mode tab menu → recent calls → delete recent calls

With this function, you could delete the records of missed calls, dialed call and received call one by one, or delete all by a time.

3.3.5 Call time

To enter the call time menu; In standby mode tab menu → recent calls → call time

With this function, you could read the records of call time, total send, and total received and operate the reset all time.

Last call time: Check the last talk time.

Total sent:

Check talk time of the dialed call

3.4 Settings

To enter the settings menu; In standby mode tab menu → settings

3.4.1 Pen calibration

To enter the pen calibration menu; In standby mode tab menu → settings → pen calibration

For the accuracy of the touch screen it is important to calibrate your touch-screen the first time you use it. From the settings menu go to pen calibration and follow the instructions on your screen.

3.4.2 User profiles

To enter the user profiles menu; In standby mode tab menu → settings → user profiles

Here you can activate or customize the user profiles of your watch phone. For user profiles please refer to basic settings

3.4.3 Phone setup

To enter the phone setup menu; In standby mode tab menu → settings → phone setup

In phone setup you can adjust setting of your phone such as Time and date, Language and Preferred input. In phone setup you can change the following options:

1. Time and Date

- 1.1.1. Set home city
- 1.1.2. Set Time/Date
- 1.1.3. Set format

2. Language

- 2.1. Set preferred language

3. Preferred input

- 3.1.1. Multitap ABC
- 3.1.2. Multitap abc
- 3.1.3. Numeric

4. Display character

- 4.1.1. Wallpaper
- 4.1.2. Analog Clock
- 4.1.3. Power on display
 - 4.1.3.1. What to show when power on phone (picture)
- 4.1.4. Power off display
 - 4.1.4.1. What to show when power on phone (picture)
- 4.1.5. Show Date and Time

- 4.1.5.1. On or off

5. Greeting text

- 5.1.1.1. On or off

6. Auto update of date and time

6.1.1. On or off

7. Flight modus

7.1.1. Normal mode

7.1.2. Flight mode

7.1.3. Query when Power on

8. Call ctrl

8.1.1. On or off

3.4.4 Call Setup

Caller ID

When calling you can choose To Hide your number, Send your number or let it set by network defaults.

Call waiting

Activate: Activate call waiting

Deactivate: Deactivate call waiting

Query status: Show the current status of call waiting functions.

Call divert

Allows you to divert calls to other numbers. You have the following options

Call barring

Allows you to prevent calls being made or received, depending on a range of circumstances.

Line switching

Can switch line between line 1 and line 2, the acquiescence in line 1.

If choose line 2, whether can dial is related to network supplier.

Call time reminder

Allows you to sound a reminder during outgoing calls in order to remind yourself about the length of the call. You can choose a Single beep once or a periodic beep that will sound after a period of time. In both cases, after choosing the reminder type you will be asked to enter the time period in seconds.

Call time display

When switched on this function allows you to see your call time during a phone call.

Auto redials

when switched on the watch will automatically try to redial if connection is lost during the call.

Closed user group

You can block a group of calls that can't reach you when activated.

Black list

When activated you can block a particular number from calling you.

3.4.5 Network Setup

To enter the Network setup menu; In standby mode tab menu → settings → Network setup

With this function, you can set up the network you automatically or manually when your mobile is under roaming status. You can only choose the network after the valid roaming between the two networks.

3.4.6 Security setup

To enter the security setup menu; In standby mode tab menu → settings → security setup

The functions associated with the safe use of mobile phones and installed option.

SIM lock

First input PIN, after entering the correct Pin you can set up the Pin code. When activated you must input PIN password every time you start you mobile. Input PIN, if your SIM card is secured with a pin code, please insert it and confirm it with the OK key. Please note that after 3 times continuous wrong input, your SIM card will be locked. The watch phone will request the PUK code of your SIM card, if you do not know the PUK code of your SIM card, please contact your telecom provider for the PUK code, to unlock the SIM card.

Phone lock

The function can be used for locking your phone. Please refer to the SIM lock method

Keypad lock

The functions can be carried out using the cell phone keypad locking/unlocking operation, automatic keyboard lock time: 5seconds, 30seconds, 60seconds, and 5minutes.

Fixed dial

Allows you to define one or more phone numbers which may be dialed from your Watch Phone. When the Fixed Dial Mode enabled, only those numbers can be dialed. For this function you need support from your network provider.

Barred dial

Allows you to define one or more phone numbers which you wish to prevent being dialed from your Watch Phone. When the Barred Dial Mode enabled, those numbers are barred from being dialed. For this function you need support from you network provider.

Change password

With this function could change PIN, PIN2 and phone password.

3.4.7 Restore factory settings

To enter the restore factory settings menu; In standby mode tab menu → settings → restore factory settings

Please input password as required, click "OK" for restoring.

3.5 Multimedia & Organizer

To enter the multimedia & organizer menu; In standby mode tab menu → multimedia & organizer

3.5.1 Organizer

To enter the organizer menu; In standby mode tab menu → multimedia & organizer → organizer

You can access or edit events on a specified date, make a to do List or set an alarm.

Calendar

Add a new event:

- (1) Double tap on a day.
- (2) Tap Add Task
- (3) Choose the task type
- (4) Set the following:
 - a. Start date
 - b. End date
 - c. Note
 - d. Alarm
 - e. Repeat alarm on a specific day
 - f. Location
 - g. Priority (Low,Medium,High)
- (5) Confirm with Yes to save your event.

Jump to date

- (1) Double tap on date
- (2) Select Jump to data
- (3) Select the date you want to jump to

See the task list

- (1) Double tap on a day.
- (2) Select view tasks
- (3) Here you can find your current tasks

To do list

The to do list will show all existing reminders, including all programmed reminders from the calendar.

- (1) Tap Add to create a new entry
- (2) Follow the procedure outlined for the Calendar (from step 4).

Alarm

Tap the alarm you want to set. You can choose from 5 alarms. You have the following options to set:

- (1) Alarm on or of
- (2) Alarm time

- (3) Alarm repeat
- (4) Alarm tone
- (5) Snooze time (mins)

Calculator

In the calculator you can make simple calculation.

To make a calculation use the keypad that will be shown in the display.

World clock

This will show a world map with cross hairs within the time zone that is configured as your location in the Time and Date settings. The current time and date for the highlighted location is shown along with either a moon or sun symbol to indicate night and day. You can the stylist to change to the next city. Tap option to turn daylight saving time for foreign city. On or Off.

E-book reader

With this function, you can read the text with TXT format, you also can search, skip, add bookmark, access or delete bookmark, switch for full screen, etc.

3.5.2 File manager

To enter the file manager menu; In standby mode tab menu → multimedia & organizer → file manager

You can read the multimedia file from memory card under this menu; you also do some operations for files, such as check, re-named, copy, delete etc.

3.5.3 Camera

To enter the camera menu; In standby mode tab menu → multimedia & organizer → camera

Please refer to relevant option in “shortcut function”

3.5.4 Image viewer

To enter the image viewer menu; In standby mode tab menu → multimedia & organizer → image viewer

With this function, you can choose one picture to do some operations such as check, send to wallpaper, screen saver, power on display, phonebook, SMS, Bluetooth, renamed, delete, etc. whether the operation is successful or not depend on the size of screen.

3.5.5 Audio player

To enter the audio player menu; In standby mode tab menu → multimedia & organizer → audio player

Please refer to relevant option in “shortcut function”

3.5.6 FM Radio

To enter the FM radio menu; In standby mode tab menu → multimedia & organizer → FM radio

- (1) Insert the earphone and turn on the radio, you can adjust different frequency and volume.
- (2) In the setting, there are: frequency list, hand import, auto search and setting.

3.6 Connections

To enter the connections menu; In standby mode tab menu → connections

3.6.1 Network services

To enter the network services menu; In standby mode tab menu → connections → network services

Depends on your simcard.

3.6.2 Bluetooth

To enter the Bluetooth menu; In standby mode tab menu → connections → Bluetooth

To connect a Bluetooth headset do the following:

1. Enter connections menu
2. Enter Bluetooth menu (2)
3. Power Bluetooth ON (Tap power (1))
4. Make sure your Bluetooth headset is turned on and ready to be paired. For instructions see your headset manual.
5. Search Device: My device (4) → Option → Inquiry new device (1)
6. Tap on your device
7. Enter security code of you device (default 0000) confirm with OK key
8. Pair Device: Tap your device → connect (1) → hands free profile (1)

Your Bluetooth headset is now connected and ready to be used.

3.6.3 Data account

To enter the Data account menu; In standby mode tab menu → connections → Data account

This function used to set up account information, account information is already provided by the Manufacturers.

GSM data transmission: the option can be installed include: account numbers, user names and passwords, lines, patterns and speed, network domain.

Frequent asked questions

If the watch mobile found abnormal, please restore to original settings, and read the following method, if the problem can not resolved, please contact seller or service person.

FAQ	Reason	Solve method
React slowly when touch screen	Touch screen have no proper adjustment	Adjust screen with the calibration wizard see 3.4.1
SIM card problem	SIM card damage	Contact with network supplier
	SIM card fixed improperly	Check SIM card is inserted properly
	SIM card has feculence	Wipe SIM card with clean towel
Signal weak	You are in a weak signal area, such as high building or basement.	Go to a good signal area.
Signal weak	The line will be crammed at high density calling period.	Avoid using mobile at high density calling period.
Power on failure	No electricity	Charge battery.
Cannot connect to network	SIM card inefficient	Contact with network supplier
	Out of GSM service area	Transfer to network service area
	Weak signal	Go to strong signal area
Cannot charge	Voltage and charge disagree	Use voltage conformity with charger
	Charger nonstandard	Use charger special for this watch mobile
	Touch badness	Check plugs

USB data : when the watch mobile is powered off, you can use the USB data wire to connect with watch mobile to windows system PC and save files.

When the watch mobile is power on, you can use USB data wire to connect watch mobile and PC, and can start up charging function. If it is Power off, USB data wire can be used as U disk.

WWW.RUKOFON.RU